

Programming a NINCO N-Digital car



1. Remove all cars from track, except the car you wish to program
2. Place car as shown on track where there are no "split rail" segments
3. Using the MENU button, put the Control Console in **CAr** mode
4. Press MENU button again; Console will beep (word **CAr** will flash)
5. Press the Lane Change button on the controller you will use for that car; Console will beep two times & display will change to read **End 1, End 2, End 3, etc.**, depending on which controller you used... the car is now programmed (test by squeezing the trigger)
6. To program additional cars, repeat **ALL** the above steps

