

Prodigy Advance Glossary

Acc = Acceleration

Accy = Accessory

Adr = Address

Cab = Cab, also known as a handheld or a walk-around

Cons = Consist

CV = Configuration Variable (CV)

Dec = Deceleration

Err = Error Message

Prog = Program

Read = Read (read CV values on the Program Track)

Sft = Shift (for shift button)

SV = Start Voltage

SYS = System (options for changing system parameters)

TV = Top Voltage

OPS Mode Programming = Programming on the Main Track

Handhelds: also known as walkarounds or Cabs

In the Prodigy Advance manual, they will be referred to as Cabs (as in loco Cabs)