### FOR YOUR PROTECTION

- Never reverse locomotive without stopping it liss. To do so may damage the locomotive engine
- Never connect locomotive to AC terminats of your TECH ITM LOCO. MO TION 2500. This may damage your locomotive motor.
- Turn power switch att and of day's operation.
- 4. When a short circuit or current overload occurs and circuit protector trips, turn the TECH ITM LOCG-MOTION 2500 off and correct the short or overload. Allow 2–5 minutes for the thermal circuit protector to reset before turning your unit back on.
- Avoid prolonged overloads and short circuits. While your TECH IITM LOCO-MOTION 2500 is equipped with several safety devices to prevent accidental damage due to short circuits and overloads, it is unwise to subject if to these frequently or . ten.
- Do not store in damp area
- For best performance, keep wheel and track surfaces clean. Intermittents
  and jerky operation are often caused by an oxide coating which has formed
  on the track or wheels.
- Before returning your unit for repair or servicing, make certain it is defective.
   Do not shut down your layout unnecessarily.
- If its necessary to return your unit, repack it in its original carton and then in an outer carton, placing at least four inches of packing material on each side.
   Mail the unit to:

MODEL RECTIFIER CORPORATION
80 Newfield Avenue
Edison, NJ 08837

Be certain to send the unit Parcel Post Insured or United Parcel Service, and include a letter with your name and address printed clearly, describing the problem you are expeniencing.

All of us at MRC would like to join in wishing you many happy years of model railroading with your new TECH HTM LOCO-MOTION 2500.

# MODEL RECTIFIER CORPORATION

Printed in U.S.A.

HEV 1

### OPERATED PRODUCT.

AS WITH ALL ELECTRIC PRODUCTS,
PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE
TO REDUCE THE RISK OF ELECTRIC SHOCK.

INPUT-120VAC 80 HZ OUTPUT-20VDC, 18VAC, 20.5VDC TOTAL-16VA



# OPERATING INSTRUCTIONS FOR MODEL 2500

CONGRATULATIONS

Model Railroading Power Supplies: MRC. to the ever growing ranks of those who purchase and use the best in this is your linst purchase of an MRC product, we wish to welcome you friends will expect and receive the best in quality and performance. If will impress you and satisfy the most avid railroader. As always, our old connection between the power pack and locomotive, and the realism, preciate the engineering and thought that went into its design. The light out with the new TECH HTM LOCO-MOTION 2500, you will grow to ap human engineered controls, and much more. As you operate your lay such features as advanced momentum circuitry, pump type spring an advanced momentum version of the TECH II series and includes ance previously unattainable. The TECH IITM LOCO-MOTION 2500 is between locomotive and power pack. The result is a level of perform the market. MRC's new TECH IFM LOCO-MOTION 2500 with Properloaded brake, high grade, advanced Noryl@ thermoplastic housing. PTC is a new system developed by MRC that allows a light connection tional Tracking Control<sup>TM</sup> (PTC) is the latest in powerpack technology You have just purchased one of the most advanced train controls on

Registered Trade Mark of General Electric Corporation.

Model Rectifier Corporation 80 Newfield Avenue, Edison, NJ 08837 (732) 225-6360

#### SPECIFICATIONS:


OUTPUT - 20VAC 60Hz
OUTPUT - 20VDC 18VAC 20.5VDC - All no load ratings
TOTAL OUTPUT - 16VA

PULSE FREQUENCY - 60 Hz

CONTROL SYSTEM - MRC'S PROPORTIONAL TRACKING CONTROL

SLOW SPEED CONTROL — Extremely slow speed control is accomplished by the use of Automatic Pulse injection. Pulses gradually disappear when they are no longer needed.

wounting - Your TECH II<sup>TM</sup> LOCO-MOTION 2500 may be placed on a flat surface during apparation. Its operating panel is human angineered for most comfortable operation. Bull-in faet allow cooling space underneath the unit. If you wish to mount your TECH II<sup>TM</sup> LOCO-MOTION 2500, we suggest you use the drawing below to layout the mounting botations. Date 5:32 inch holes where indicated and install I-1/4 inch long 5-32 screws from the bottom. A nut should be placed on top of the screws and tightened. If you follow this template, the holes in the bottom of the TECH II<sup>TM</sup> LOCO-MOTION 2500 will fit neatly on the remaining length of the screws. In order to move the unit just IN it off the screws and you can move it to another locution.

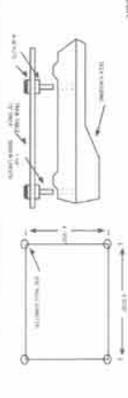

#### CONTROLS

MASTER SWITCH — The master on-off switch disconnects the input power from your TECH IITM RAILMASTER 250b and shuts the unit down completely.

DIRECTION SWITCH — The direction switch reverses the polarity of voltage applied to the track and thereby reverses the direction of your occurrative. This switch should only be operated when the locomotive is not moving.

MOMENTUM SWITCH — The momentum switch is your TECH ITM LOCG—MOTION 2500 allows operation is either of two modes. With the switch in the off position a change in the throitie setting results in an immediate change in locomptive speed. With the momentum switch in the on position the locomptive individually like a real locomptive in the one position the locomptive individually like a real locomptive in given an increase in throitie setting there is a lag until the pre-set speed is reached. The heavier the load of cars being drawn the longer the lag time or delay. Similarly, when breaking a real locomptive, a considerable distance is needed in order to stop. Since lightweight models do not mime this delay on their twen, numeritum circuitry, as in this pack, is used to create a electrically. Different rates of occileration can be obtained by verying the maximum position of the strontile. Setting the thirottle to "100" will produce fairly rapid acceleration. To more gradual, and so on.

PUMP TYPE BRAKE — The brake in your TECH IIM LOCO-MOTKON 2500 is a spring loaded slide switch. To operate the brake, move the switch to the on position and hold if there. Your locomotive will slow at a steady rate. If your throttle was left at a setting other

than 0 releasing the brake w/licause the locomotive to gradually accelerate to the speed determined by the throttle setting (as long as the momentum switch is on). Pumping the brake will allow for more gradual deceleration.

THROTTLE CONTROL - The throttle is used to set the speed of the locomotive you are controlling. With the momentum switch in "off", your locomotive will immediately accelerate to the speed dictated by the throttle. In momentum "on", however, the brake shoold be applied to slow the locomotive. If brake is not applied, but the throttle is turned down, the train will very, very slowly scent to a stop, just fixe a real train.

#### INDICATORS

MOMENTUM — Your TEDH | I'm LOCO—MOTION 2500 is equipped with an indicator light to make you aware of when the momentum switch is in the "on" position. This light will glow whenever momentum is engaged, event if the localnotive is not moving.

POWER MONITOR—The power monitor is used to give an approximate indication of output voltage. You will find this very useful in detecting shorts, opens on your track, etc. If the throttle is will in an 'on' position and the light intensity increases as the locomotive continues to run, this indicates less current is being drawn. If the light becomes less intense, more current is being drawn. If the light goes out suddenly this indicates a short circuit and will shortly be followed by the light goes out suddenly this indicates a short circuit and will shortly be followed by the light of the overload indicate. A slight fickering of this light during operation is normal and does not indicate a problem.

OVERLOAD INDICATOR: Your TECH HIM LOCO-MOTION 2500 is equipped with a sensitive thermal circuit protector. In the event of a short circuit or overload, the circuit protector will trip land begin to cycle on and off. Your eventoad indicator will light and cycle with the protector giving a visual indication of a problem. When this occurs, turn your unit off, correct the source of the short circuit or overload, wait 2-5 minutes for the circuit protector to reset, then turn the unit back on. If the overload indicator is still it, you have either tailed to correct the source of the short circuit or overload, or you have not waited long exough for the circuit protector to reset.

#### TERMINALS

VARIABLE DC – These forminals are for attachment of your TECH II<sup>10</sup> LDCO–MOT (ON 2500 to the main line of your liyout. If the direction of your locandiffe does not match the position of the Direction Switch, simply severse the wires going to these ferminals.

ACCESSORIES AC - These terminate supply AC voltage for use with AC accessories Polarity does not matter.

FIXED DC – These terminals supply DC voltage for use with Cab Controls and DC accessories.

NOTE: When connecting to any terminal, care must be taken that wires do not touch more than one terminal at one time. Loose wires are a danger to your unit and layout; be certain wires are properly wrapped around terminal before fightening screen.

PARENTS, PLEASE NOTE: As with any electrically operated unit, it is always best to previously, examine it and have repaired or replaced any potentially hazardous part.