FOR YOUR PROTECTION

- Never reverse locomotive without stopping it first. To do so may damage the locomotive engine.
- Never connect locomotive to AC terminals of your TECH ITM LOCO MO-TION 2500. This may damage your locomotive motor.
- 3 Turn power switch off at end of day's operation.
- When a short circuit or current overload occurs and circuit protector trips, turn the TECH ITM_LOCO-MOTION 2500 off and correct the short or overload. Allow 2-5 minutes for the thermal circuit protector to reset before turning your unit back on.
- Avoid prolonged overloads and short circuits. While your TECH IITM LOCO-MOTION 2500 is equipped with several safety devices to prevent accidental damage due to short circuits and overloads, it is unwise to subject if to these frequently or ...ten.
- 6. Do not store in damp area.
- For best performance, keep wheel and track surfaces clean. Intermittents
 and "jerky" operation are often caused by an oxide coating which has formed
 on the track or wheels.
- Before returning your unit for repair or servicing, make certain it is defective.
 Do not shut down your layout unnecessarily.
- If it is necessary to return your unit, repack it in its original carton and then in an outer carton, placing at least four inches of packing material on each side.
 Mail the unit to:

MODEL RECTIFIER CORPORATION 80 Newfield Avenue Edison, NJ 08837

Be certain to send the unit Parcel Post Insured or United Parcel Service, and include a letter with your name and address printed clearly, describing the problem you are experiencing.

All of us at MRC would like to join in wishing you many happy years of model railroading with your new TECH ITM LOCO-MOTION 2500.

MODEL RECTIFIER CORPORATION

Printed in U.S.A.

INS-1270 REV. 1

OPERATED PRODUCT.

NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE.

AS WITH ALL ELECTRIC PRODUCTS,

PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE
TO REDUCE THE RISK OF ELECTRIC SHOCK.

INPUT-120VAC 80 HZ OUTPUT-20VDC, 18VAC, 20.5VDC TOTAL-16VA



OPERATING INSTRUCTIONS FOR MODEL 2500

CONGRATULATIONS!

You have just purchased one of the most advanced train controls on the market. MRC's new TECH IITM LOCO-MOTION 2500 with Proportional Tracking ControlTM (PTC) is the latest in powerpack technology. PTC is a new system developed by MRC that allows a tight connection between locomotive and power pack. The result is a level of performance previously unattainable. The TECH IITM LOCO-MOTION 2500 is an advanced momentum version of the TECH II series and includes such features as advanced momentum circuitry, pump type spring loaded brake, high grade, advanced Noryl@ thermoplastic housing, human engineered controls, and much more. As you operate your layout with the new TECH HTM LOCO-MOTION 2500, you will grow to appreciate the engineering and thought that went into its design. The tight connection between the power pack and locomotive, and the realism, will impress you and satisfy the most avid railroader. As always, our old friends will expect and receive the best in quality and performance. If this is your first purchase of an MRC product, we wish to welcome you to the ever growing ranks of those who purchase and use the best in Model Railroading Power Supplies: MRC.

G Registered Trade Mark of General Electric Corporation.

Model Rectifier Corporation 80 Newfield Avenue, Edison, NJ 08837 (732) 225-6360

SPECIFICATIONS;


INPUT - 120VAC 60Hz OUTPUT - 20VDC 18VAC 205VDC - All no load ratings TOTAL OUTPUT - 16VA

PULSE FREQUENCY - 60 Hz

CONTROL SYSTEM - MRC'S PROPORTIONAL TRACKING CONTROL

SLOW SPEED CONTROL - Extremely slow speed control is accomplished by the use of Automatic Pulse injection. Pulses gradually disappear when they are no longer needed.

MOUNTING – Your TECH II™ LOCO-MOTION 2500 may be placed on a flat surface during operation. Its operating panel is human engineered for most comfortable operation. Built-in feet allow cooling space undermeath the unit. If you wish to mount your TECH II™ LOCO-MOTION 2500, we suggest you use the drawing below to layout the mounting locations. Drill 5/32 inch holes where indicated and install 1–1/4 inch long 6–32 screws from the bottom. A nut should be placed on top of the screws and tightened. If you follow this template, the holes in the bottom of the TECH II™ LOCO-MOTION 2500 will fit neatly on the remaining length of the screws. In order to move the unit, just this off the screws and you can move it to another resistion.

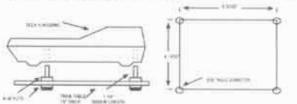

CONTROLS

MASTER SWITCH - The master on-off switch disconnects the input power from your TECH IIIM RAILMASTER 2500 and shuts the unit down completely

DIRECTION SWITCH - The direction switch reverses the polarity of voltage applied to the track and thereby reverses the direction of your locamative. This switch should only be operated when the locamative is not moving.

MOMENTUM SWITCH — The momentum switch in your TECH IIT® LOCO-MOTION 2500 allows operation in either of two modes. With the switch in the off position a change in the throttle setting results in an immediate change in iccomotive speed. With the momentum switch in the on position the locomotive moves slowly and gradually like a real locomotive. This switch can add substantially to your model rainsading enjoyment. When a real locomotive is given an increase in throttle setting there is a lag until the pre-set speed is reached. The heavier the load of cars being drawn the longer the lag time or delay. Similarly, when braking a real locomotive, a considerable distance is needed in order to stop. Since lightweight models do not mimic this delay on their own, momentum circuitry, as in this pack, is used to create it electrically. Offerent rates of acceleration can be obtained by varying the maximum position of the throttle. Setting the throttle to "100" will produce fairly rapid acceleration, "90" more gradual, and so on.

PUMP TYPE BRAKE – The brake is your TECH IIM LOCO-MOTION 2500 at a spring loaded slide switch. To operate the brake, move the switch to the on position and hold if there. Your locomotive will slow at a steady rate. If your throttle was left at a setting other

than 0 releasing the brake will cause the locomotive to gradually accelerate to the speed determined by the throttle setting (as long as the momentum switch is on). Pumping the brake will allow for more gradual deceleration.

THROTTLE CONTROL - The throttle is used to set the speed of the locomotive you are controlling. With the momentum switch in "off", your locomotive will immediately accelerate to the speed dictated by the throttle. In momentum "on", however, the brake should be applied to slow the locomotive. If brake is not applied, but the throttle is turned down, the train will very, very slowly scast to a stop, just like a real train.

INDICATORS

MOMENTUM — Your TECH || "** LOCO-MOTION 2500 is equipped with an indicator light to make you aware of when the momentum switch is in the "on" position. This light will glow whenever momentum is engaged, even if the locamative is not moving.

POWER MONITOR – The power monitor is used to give an approximate indication of output voltage. You will find this very useful in detecting shorts, opens on your track, etc. If the throttle is left in an "on" position and the light intensity increases as the locomotive continues to run, this indicates less current is being drawn. If the light becomes less intense, more current is being drawn. If the light goes out suddenly this indicates a short circuit and will shortly be followed by the light of the overload indicator. A slight lickering of this light during operation is normal and does not indicate a problem.

OVERLOAD INDICATOR: Your TECH II™ LOCO-MOTION 2500 is equipped with a sensitive thermal circuit protector. In the event of a short circuit or overload, the circuit protector will trip and begin to cycle on and off. Your everload indicator will light and cycle with the protector giving a visual indication of a problem. When the occurs, turn your unit off, correct the source of the short circuit or overload, wait 2-5 minutes for the circuit protector to reset, then turn the unit back on. If the overload indicator is still it, you have either failed to correct the source of the short circuit or overload, or you have not waited long enough for the circuit protector to reset.

TERMINALS

VARIABLE DC - These terminals are for attachment of your TECH III¹⁰⁸ LCCO-MOTION 2500 to the main line of your layout. If the direction of your locomotive does not match the position of the Direction Switch, simply reverse the wires going to these terminals.

ACCESSORIES AC - These terminals supply AC voltage for use with AC accessories.

FIXED DC - These terminals supply DC voltage for use with Cab Controls and DC accesso-

NOTE: When connecting to any terminal, care must be taken that wires do not touch more than one terminal at one time. Loose wires are a danger to your unit and layout; be certain wires are properly wrapped around terminal before tightening screws.

PARENTS, PLEASE NOTE: As with any electrically operated unit, it is always best to push odically examine it and have repaired or regisced any potentially hazardous part.