

PROGRAMMING

This decoder supports all programming methods including: register, paged CV, direct CV, and programming on the main (ops mode programming).

CV	Register	Description	Range	Default
CV1	R1	Short address	1-127	3
CV2	R2	Start voltage	0-32	0
CV3	R3	Acceleration	0-32	0
CV4	R4	Deceleration	0-32	0
CV5	---	Top voltage	0-32	32
---	R6	Page number	---	---
CV29	R5	Basic configuration	---	2
CV7	R7	Manufacturer version number	---	32
CV8	R8	Manufacturer ID	---	143
CV17	---	Long address upper byte	192-231	192
CV18	---	Long address lower byte	0-255	3
CV19	---	Advanced consist address	0-127	0
CV21	---	When CV21=0, all accessory functions will follow its own address. When CV21=1, all functions will follow the consist address	---	0
CV49		Sound on/off (1=on)	0-1	1
CV50	---	Horn type	0-15	4
CV51	---	Horn volume	0-3	3
CV52	---	Bell type	0-9	3
CV53	---	Bell volume	0-3	3
CV54	---	Bell ring rate	0-50	3
CV55	---	Diesel rumble volume	0-3	3
CV56	---	Brake squeal volume	0-3	3
CV57	---	Dynamic brake volume	0-3	3
CV58	---	Air release volume	0-3	3
CV59	---	Air pump volume	0-3	3
CV60	---	Safety pop valve volume	0-3	3
CV61	---	Engine cooling fan volume	0-3	3
CV62	---	Coupling volume	0-3	3
CV63	---	Random noise volume	0-3	3
CV64	---	Rail wheel clack	0-3	3
CV105	---	User identification number	0-255	0
CV106	---	User identification number	0-255	0
CV115	---	Auto brake squeal enable/disable	0-1	1(enable)
CV116	---	Coupling sound type	0-2, 2=off	1
CV117	---	Lights enable/disable	0-1	1(enable)
CV119		Coupling fire volume	0-3	3
CV120		Brake release volume	0-3	3
CV121		random noise enable	0-1	1(enable)
CV122		Diesel sound type (0=off, 1=rpm & notch synchro to speed, 2=linear rpm synchro to speed, 3=notch up/down (F8=notch down, F9=notch up))	0-3	1
CV124		Speed curve select (0=linear, 1=slow increase at low speed, 2=fast increase at low speed)	0-2	0
CV125	---	Factory default setting: Programming to 1 will restore all CV's to default setting	---	0

NOTE: Due to limitations in older DCC systems, some of the sound functions or light effects functions may not be accessible. ALSO, you might be limited to factory default CV values.

Note: Bell, Dynamic Brake and Rail Wheel Clack cannot play at the same time. If you activate the Bell sound [F1], while either the Dynamic Brake or Rail Wheel Clack sounds are activated, the Bell sound will override the other 2 sounds. Rail Wheel Clack cannot play while the loco is in idle. When you turn off Dynamic brake and Rail Wheel Clack sound there will be one second delay.

TROUBLE SHOOTING

The MRC 0001636 N diesel sound decoder should perform well with all DCC systems. See your DCC system manual to learn how to program and operate the decoder. For more information about register/CVs and their functions, please refer to the NMRA DCC Standard & Recommended practices, RP-9.2.2 this is available directly from the NMRA or their website at www.nmra.org.

Due to the nature of all sound decoders, the CV read back is not 100% correct. So this feature is not supported in the decoder. This is not a defect of the decoder or your DCC system.

Whenever the decoder doesn't work please use program track to re-program the loco address or program CV# 125 with value 1 to restore the decoder to factory setting. This should bring the decoder to life.

FCC COMPLIANCE

This device complies with the part 15 of FCC rule. Operation is subject to the following two conditions. (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that cause undesired operation.

RETURN PROCEDURE

If it should become necessary to return your decoder, unplug the decoder and return the decoder only. Please include a letter (printed clearly) with your name, address, a daytime telephone number, and a detailed description of the problem you are experiencing. Please also include a \$15.00 check for shipping and handling. **Be certain to return only the decoder.**

Send the decoder to:

Model Rectifier Corporation
Attn: Parts & Service
80 Newfield Avenue
Edison, NJ 08837-3817 U.S.A



N Gauge Synchronized Diesel Sound Decoder with 19 Accessory Sound Functions

Item #0001636

Thank you for purchasing our highly advanced DCC locomotive sound decoder. Combined with any DCC System, our new decoder with authentic diesel sound truly will make your model railroad come to life.

- Synchronized diesel prime mover with randomly associated locomotive sounds
- User selectable 15 different horns and 8 bells
- 19 accessory functions allowing more sound control than ever
- Programmable individual sound volumes
- 0.75 amp capacity
- Programmable for either 2-digit (1-127) or 4-digit (1-9999) addresses
- Programmable start voltage
- Programmable acceleration rate
- Programmable deceleration rate
- Programmable top voltage
- Programmable 14, 28, 128 speed steps
- Selectable factory default speed curve
- Directional lighting (FO) at 0.2 amp rate
- Supports advanced consisting (CV19)
- Supports programming on the main (OPS mode)
- Compatible with NMRA DCC standards
- Complies with Part 15 of FCC
- 13x18mm speaker included
- PCB size: 70 x 9.2 x 5.8mm
- Directly replaces most Atlas N scale loco's PC boards

INSTALLATION

It is quite a challenge to install this decoder into an "N" scale diesel locomotive. You should have some basic electronics knowledge, and some chassis/frame milling and soldering skills. If you are not sure you can perform this installation by yourself, you can contact "Aztec Mfg." Tel: [775] 883-3327, for an aftermarket chassis.

The body shell, and fuel tank casting must be removed from the chassis, and the entire frame must be disassembled. Mark the top of the motor with a dab of paint or permanent marker; remove the original circuit board, motor, driveshafts, bearings, and trucks.

An area of the fuel tank portion of the frame must be milled out to accommodate the speaker using a rotary or comparable tool, a wire channel for the speaker wires should be cut on both frame halves with a cutting disk. Use a small modelers file to remove any rough or jagged edges from the frame castings.

The speaker wires are coated with a ceramic insulation and are very delicate. Care should be taken not to nick the wires or repeatedly bend them during installation, as this could damage the insulation, causing a short circuit.

The top portion of each frame half that touches the motor brush tabs should be insulated with a small piece of clear tape.

The decoder replaces the original circuit board of the locomotive and should fit in the same location. Assemble one half of the frame first, installing the decoder, motor, driveshafts, bearings, trucks, and frame spacers. Gently place the other frame half on top of the completed half, checking clearances and if there is any binding of the drive mechanism. Correct any trouble spots at this point. Also check to make sure the motor brush tabs are not touching the frame halves and the clear tape is correctly positioned at the motor brush tab points to avoid shorting out the decoder. Now you can install the insulated bolts and nuts to secure both frame halves together.

Gently route the speaker wires into the channels, fold any excess length of wire above or next to the decoder and secure with a piece of clear tape.

Re-check installation!!! If at this point you are satisfied with the mechanical installation of the decoder and all associated parts, it is time to check the installation on a test track. Do not install body shell until testing is done. See section on "Making a Test Track", and "Testing"

***Before installing the plastic fuel tank casting it is recommended that a few small holes are drilled into the bottom of the casting to let the sound out. This will give you the best fidelity and volume the decoder has to offer.**

Figure 1. Connection of standard locomotive



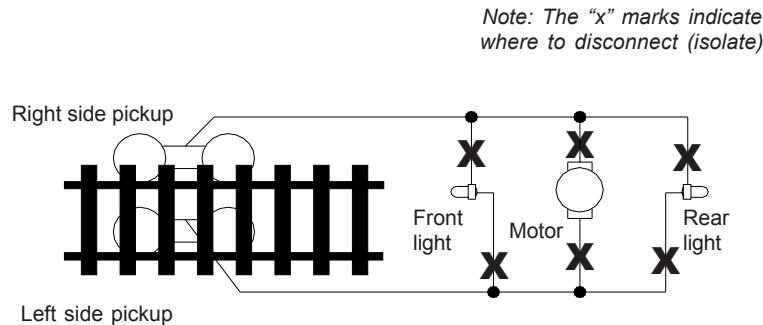


Figure 2. shows how to install 0001636 decoder

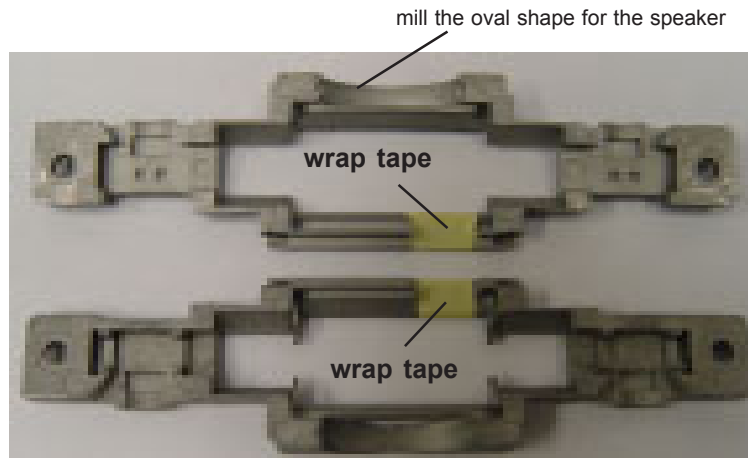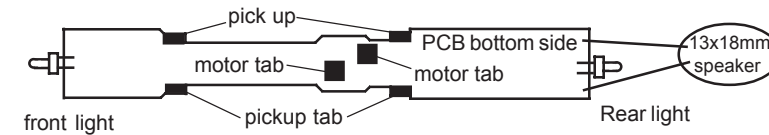

Wrap the whole notch with tape to prevent the motor's contact from touching the chassis. Otherwise, the decoder will be destroyed if the motor contact touches any unwrapped part of the chassis.

MAKING A TEST TRACK

Before you begin decoder installation, we strongly recommend building a test track with a 27 ohm resistor to limit current. Only test your installed decoder on the test track. The test track may prevent damage from an incorrectly installed decoder.

Note: The program track is NOT a test track. The program track does not use a current limiting resistor. So it can't protect an incorrectly installed decoder.

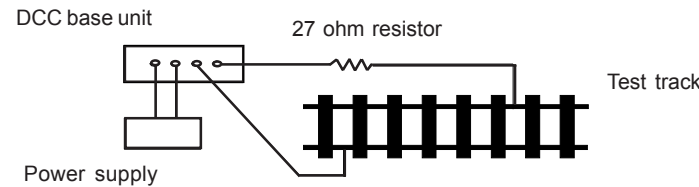


Figure 3. Diagram of test track

TESTING

All MRC decoders have been factory programmed with address #3, 28/128 speed steps and maximum top voltage. **Never run the installed decoder on your layout without first successfully running on test track.** Otherwise, you may damage the decoder if it is not wired correctly or if you have not properly isolated the motor and lights.

To test, place the loco on the test track. Select the "Run" mode of your DCC system and select or acquire address #3. Move up the throttle and the loco should move forward. Push the light button [F0] and the front headlight should come on. Change the direction of the loco and the loco should change direction and the rear headlight (if equipped) should come on. The loco cannot reach full speed, due to the resistor. If all above occurs, you passed the test. Congratulations!

Do not run the loco for an extended period of time on the test track or the resistor will overheat.

If your installed decoder does not pass the test, find the problem, correct it and test it again.

OPERATION

This decoder has start up and shut down feature. You must press any function key to start up the engine before operating the loco. To shut down the engine you must bring the loco to idle and then press F8 3 times.

This decoder can also be used in an Electric Type Traction Loco such as Trolley or GG-1 by turning off diesel sounds. To turn off the diesel prime mover sounds, program CV #122 with value 0.

If using the MRC Prodigy Advance DCC System, you can use F18 to select different bells. First use F1 to activate bell. Then use F18 to scroll through 8 different bell sounds. You can use F19 to scroll through 15 different horns. When using other DCC systems you have to program CV #52 to select bell and CV #50 to select horn.

There are many more program features available with this decoder. Please refer to the CV Chart to explore other features of the decoder.

DIESEL SOUNDS CHART

Function	Idle/Moving
Double click F0	Turns on/off accessory lighting
F1	Bell on/off
F2	Horn
F3	Air release w hile moving or prime mover rev up during idle
F4	Coupling/air hose firing
F5	Brake release (idle) / brake squeal (moving)
F6	Dynamic brake on/off
F7	Air hose firing/uncoupling lever
F8	notch down (w hen CV122=3)/associated loco sound
F9	notch up (w hen CV122=3)/associated loco sound
F10	Rail w heel clack (only moving)
F11	Traction air compressor
F12	Engine cooling fan
F13*	short air release
F14*	Associated loco sound
F15*	Air pump
F16*	Associated loco sound
F17*	flange noise
F18*	Change bell type
F19*	Horn type select *

* Note: Only MRC Prodigy advance DCC has F13-F19 accessory functions